

The Fire Sprinkler system for each residential unit is a high pressure structure. Each building has its own control system for the units in the building. The location of the control panel can be determined by looking for the fire bell on the outside of the building and by the Fire Department Connection.



The actual control panel is labeled "Control Valve." To open the panel, use a flathead screwdriver or a thin coin. Turn the slot to the horizontal position.



Copies of the following directions are posted on the inside of each building control panel door.

Directions to turn off the Fire Sprinkler system in the event of an emergency are as follows:

On the inside of the panel, there are two valves. Valve A is on the RIGHT while valve B is on the LEFT.

To turn-off the sprinkler system for the building, do the following:

- First turn off Valve A by turning the valve wheel in the clockwise direction.
- Next turn Valve B also in the clockwise direction to open the drain which releases the water pressure in the system.



Valve A

Valve B

Call Keystone Pacific to report that the fire sprinkler system has been turned off and that it needs to be reset and turned back on.

Keystone Pacific: (949) 833-2600